


### Fitting instructions for ignition switches:

- A = Accessories
- B = Battery
- BAT = Battery
- G = Earth
- GRD = Earth
- I = Ignition
- L = Lighting
- M = Ignition
- MAG = Ignition
- R = Regulator
- S = Solenoid/Starter relay
- SOL = Solenoid/Starter relay
- S1 = PTO switch (clutch)
- S2 = Neutral switch
- X = Alternator direct current
- Y = Solenoid valve

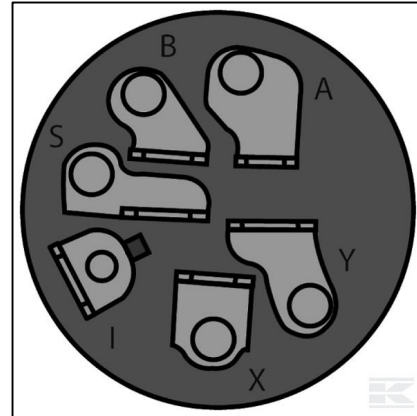

**FGP456303**