


WORK LIGHT BAR LED : LA10811, LA10812, LA10813, LA10814, LA10815, LA10816, LA10818, LA10820, LA10821, LA10824, LA10826

ART.NR.	LUMEN	WATT	VOLT	SHAPE	E-BOOST	ECE	Number of LED	SIZE (mm)
LA10811	5040	60	12/24	Straight	Yes	R10	12	204x70x67
LA10812	10080	120	12/24	Straight	Yes	R10, R148, R149	24	357x70x67
LA10813	16800	200	12/24	Straight	Yes	R10, R148, R149	40	561x70x67
LA18014	25200	300	12/24	Straight	Yes	R10, R148, R149	60	815x70x67
LA18015	33600	400	12/24	Straight	Yes	R10, R148, R149	80	1076x70x67
LA10816	10080	120	12/24	Curved	Yes	R10, R148, R149	24	358.4x70x78.6
LA18018	25200	300	12/24	Curved	Yes	R10, R148, R149	60	814.9x70x78.6
LA18020	3780	45	12/24	Straight	Yes	R10, R148, R149	9	246x40x54
LA10821	8820	105	12/24	Straight	Yes	R10, R148, R149	21	522x40x54
LA18024	8820	105	12/24	Curved	Yes	R10, R148, R149	21	525.5x40x54.4
LA10826	17640	210	12/24	Curved	Yes	R10, R148, R149	42	1007.1x40x54.4

ATTENTION:

R148:	Driving Beam WHITE color.
R149:	Position light WHITE color.
R10:	EMC approval.
OFF-ROAD:	Position light AMBER color.
OFF-ROAD:	E-Boost.
LA10811:	Off-road use only.

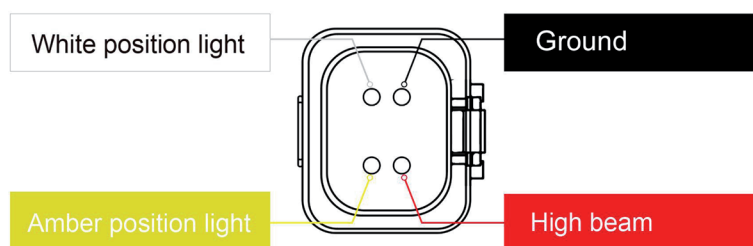

HOW TO CONTROL BOOST MODE:

- The first time you start this light is set to ECE approved mode.
- To switch to Boost mode, turn on the high beam for 2 seconds, then flash the high beam 2 times.
- To switch back to ECE approved mode, turn off the high beam for 2 seconds, turn on high beam for 2 seconds, then flash the high beam 2 times.

For high power work light(s) and light bar(s) your vehicle electrical circuit may need an additional relay to operate this high power application within a low power electrical circuit.

PLEASE READ ALL INFORMATION IN THIS MANUAL BEFORE INSTALLATION AND USE.

Please note it is the vehicle owner's responsibility to ensure all product installations are properly, safely and legally installed in accordance to the regional regulations of use.

Kramp takes no responsibility for incorrect installation and/or any related damages.

WARNING!

Strong chemicals should not be used on the product. Do not use higher voltage power than the product description states. Do not remove or touch the light which become hot after continuous working, at least 30mins after turning the light off.

INSTALLATION:

All screws, bolts and nuts of mounting hardware should be tightened and checked, Kramp recommends using a medium strength liquid or gel thread-lock. Do not tighten screws too hard that the protective bearings on the product breaks.