
Spare parts ordering key for hand-control valves

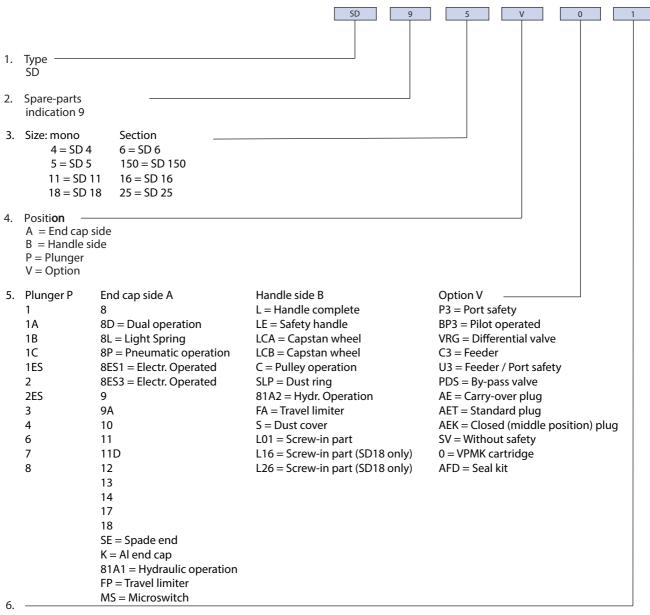




1 - 2 - 3 - 4 = Spring

Spare-parts overview for hand control valves



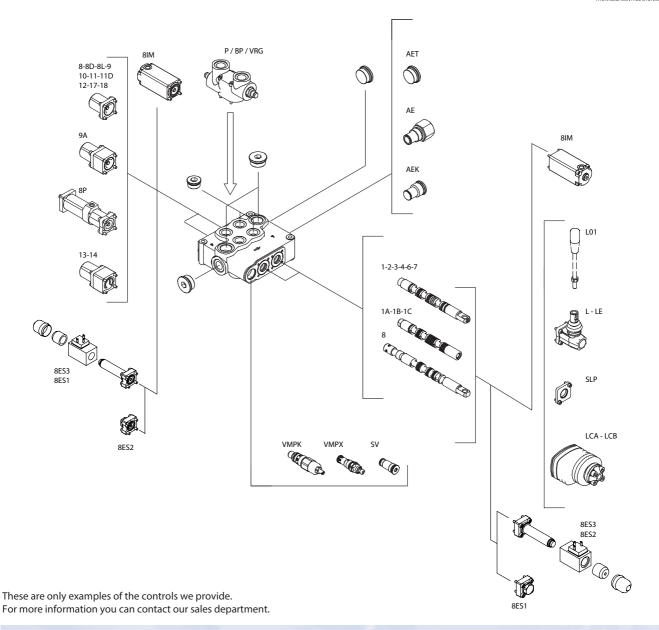





HAND-CONTROL VALVES

Plungers Detents DETENT 8,



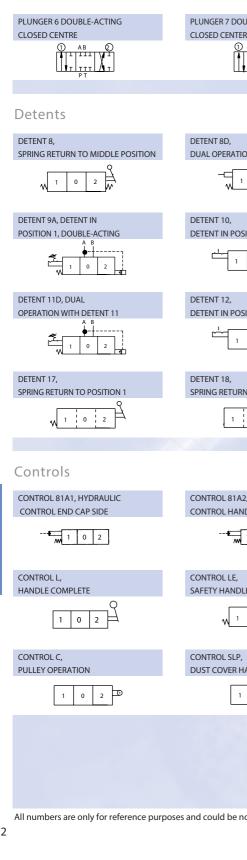

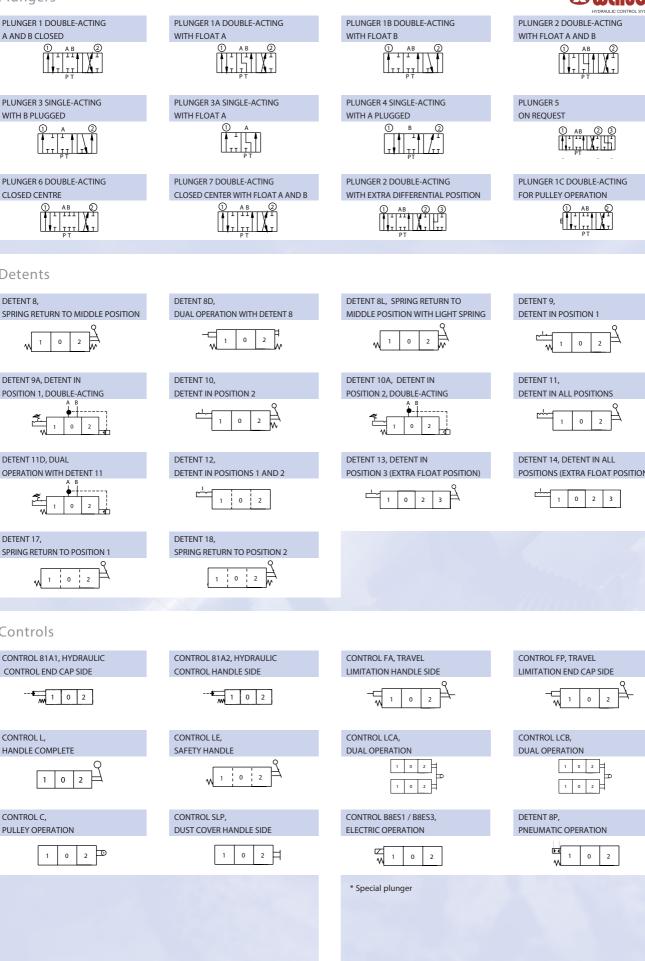



POSITIONS (EXTRA FLOAT POSITION)