



BEAD BREAKER

- Y471120 - Y471130 -



GEBRUIKSAANWIJZING (NL)

VOORWOORD:

Wij feliciteren u met de aankoop van dit WinnTec kwaliteitsprodukt.

Voor ingebruikname verzoeken wij u de bijgeleverde waarschuwingen en gebruiksvoorschriften aandachtig door te lezen.

WAARSCHUWINGEN :

- Wees er zeker van dat de band is volledig leeggelopen voordat u begint met demontage werkzaamheden.
- Verander de fabrieksinstellingen van het veiligheidsventiel niet.

GEBRUIKSVOORSCHRIFTEN

- Sluit de (handmatige of lucht) hydraulische pomp aan op de hiel drukker d.m.v. de snelkoppeling.
- Houdt de hiel drukker bij de velg, met de klauw gedrukt tegen de binnenkant van de velg, plaats de voet op de hiel van de band zo dicht mogelijk tegen de velgrand.

ONDERHOUD :

- Wanneer de hydraulische pomp ontkoppeld is, moet direct het beschermkapje ingebracht worden om de koppeling schoon te houden.

GARANTIE :

Op dit WinnTec produkt geldt een volledige garantie op fabricage fouten binnen 12 maanden na aankoopdatum.

In een dergelijk geval dient het produkt te worden geretourneerd naar het aankooppunt. Tevens moet het aankoopbewijs worden overlegd.



INSTRUCTION MANUAL (GB)

FOREWORD :

We thank you for buying this WinnTec quality product. Before using this product, carefully read these instructions and become acquainted with the safety regulations.

GENERAL SAFETY REGULATIONS :

- Verify that the tire is completely deflated before starting disassembling operations.
- Do not change the safety valve calibration set by manufacture.

USE (SEE ALSO 'SETUP BEAD BREAKER') :

- Connect the hydraulic pump(manual or air)to the bead breaker through the quick-coupler.
- Hold the bead breaker to the rim, with the claw (toe) pushing against the inner part of rim, shovel and feet (toe pin) push against bead of the tire.
- Maintaining pressure and push the shovel (toe pin) against the bead till the bead is broken from the rim.


MAINTENANCE :

- When hydraulic pump are disconnected, always insert dust cap to keep the coupler clean.

GUARANTEE :

This WinnTec product is fully guaranteed against manufacturing defects for a period of 12 months from the date of purchase. If your product proves faulty during the guarantee period, it should be returned to the place of purchase together with the original receipt.

- Onderdelen -
- Spare parts -
- Pièces de rechange -
- Ersatzteile -

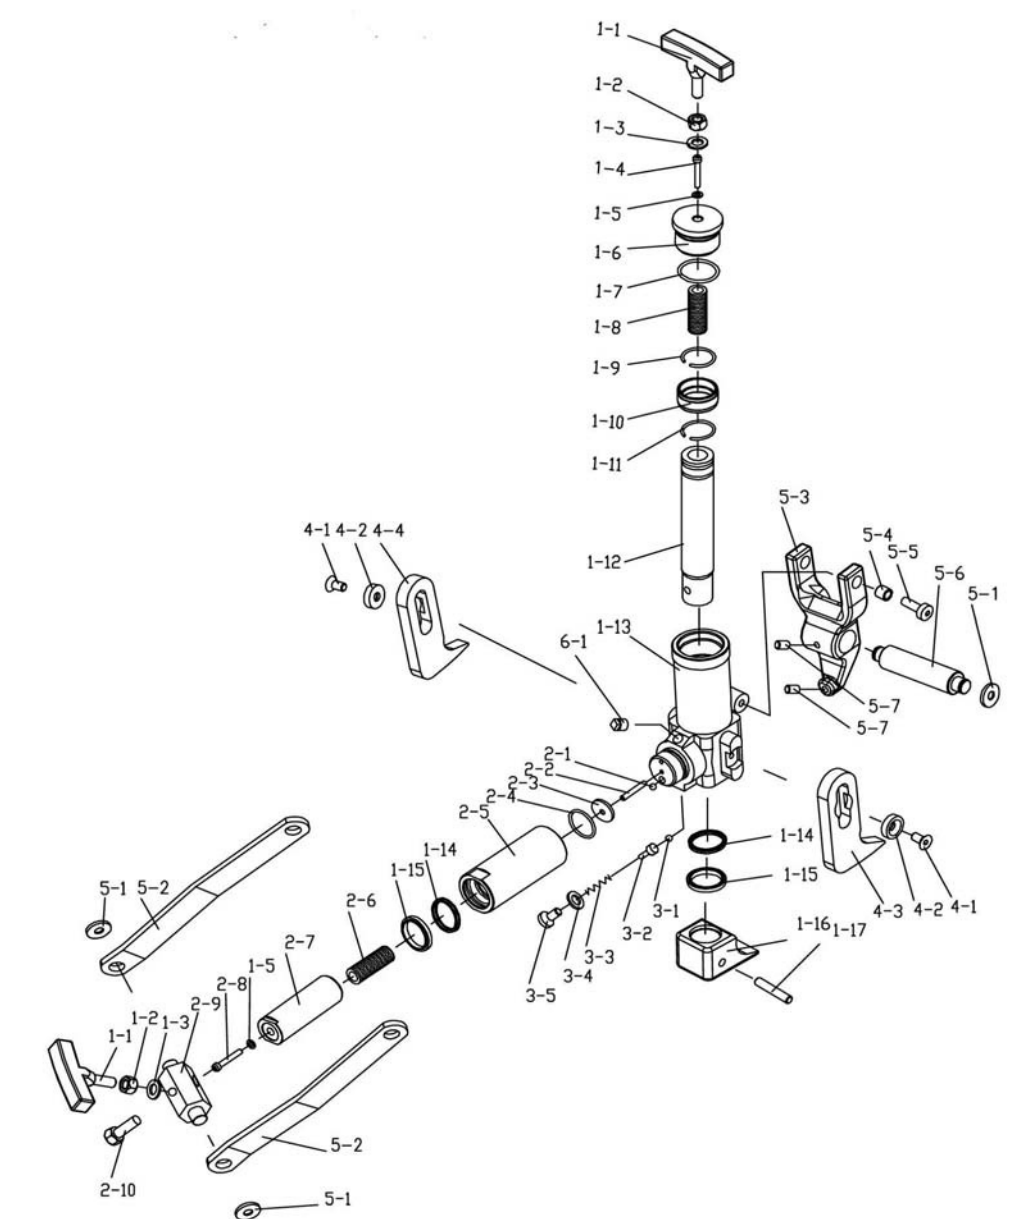


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –



Pos.	Art. No.	Description	Pos.	Art. No.	Description
1-1	Y471120-1-1	Handle	2-7	Y471120-2-7	Piston rod
1-2	Y471120-1-2	M12 nut	2-8	Y471120-2-8	M5×70 screw
1-3	Y471120-1-3	φ12 Washer	2-9	Y471120-2-9	Joint block
1-4	Y471120-1-4	M5 ×50 screw	2-10	Y471120-2-10	M12 ×45 bolt
1-5	Y471120-1-5	φ5 Copper washer	3-1	Y471120-3-1	φ8 steel ball
1-6	Y471120-1-6	Cylinder cap	3-2	Y471120-3-2	Ball seat
*1-7	Y471120-1-7	O-ring	3-3	Y471120-3-3	Spring
1-8	Y471120-1-8	Spring A	3-4	Y471120-3-4	φ12 copper washer
1-9	Y471120-1-9	Snap ring	3-5	Y471120-3-5	M12×20 screw
1-10	Y471120-1-10	bushing	4-1	Y471120-4-1	M10×15 Screw
1-11	Y471120-1-11	Snap ring	4-2	Y471120-4-2	Bushing
1-12	Y471120-1-12	Piston rod	4-3	Y471120-4-3	Left foot
1-13	Y471120-1-13	Cylinder body	4-4	Y471120-4-4	Right foot
*1-14	Y471120-1-14	Y-seal	5-1	Y471120-5-1	Snap ring
*1-15	Y471120-1-15	Bushing	5-2	Y471120-5-2	Connection rod
1-16	Y471120-1-16	Extrusion leg	5-3	Y471120-5-3	Claw
1-17	Y471120-1-17	Pin	5-4	Y471120-5-4	Bushing
2-1	Y471120-2-1	φ6 steel ball	5-5	Y471120-5-5	M10×25 Screw
2-2	Y471120-2-2	M6× 30 screw	5-6	Y4711205-6	Shaft
*2-3	Y471120-2-3	Washer	5-7	Y471120-5-7	Screw
*2-4	Y471120-2-4	O-ring	6-1	Y471120-6-1	Plug
2-5	Y471120-2-5	Cylinder	*	Y471120-PURK	Repair kit
2-6	Y471120-2-6	Spring			

Spare parts List

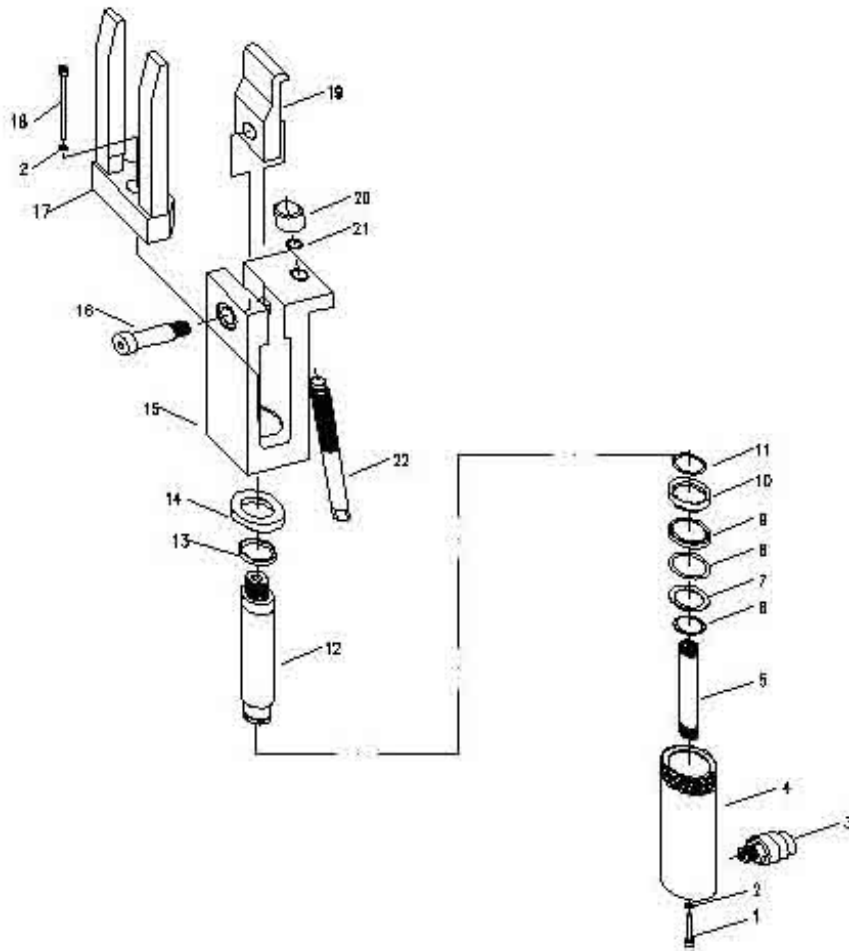

Pos.	Art. No.	Description	Pos.	Art. No.	Description
*1	Y471130-1	Screw M6 × 35	13	Y471130-13	Pilot ring
2	Y471130-2	Washer	14	Y471130-14	Bound ring
3	Y471130-3	Tie-In assy.	15	Y471130-15	Toe housing
4	Y471130-4	Cylinder	16	Y471130-16	Table Pin
5	Y471130-5	Returning spring assy.	17	Y471130-17	Toe body
*6	Y471130-6	Snap ring	18	Y471130-18	Screw M6 × 90
*7	Y471130-7	Washer	19	Y471130-19	Toe
*8	Y471130-8	O-ring	20	Y471130-20	Top cap
*9	Y471130-9	Sealing washer	21	Y471130-21	Snap ring
*10	Y471130-10	Piston ring	22	Y471130-22	Screw
11	Y471130-11	O-ring	*	Y471130-PURK	Repair Kits
12	Y471130-12	Ram piston			