




ACCUMULATORI IDROPNEUMATICI

STANDARD MAINTENANCE FOR DP100 CHARGING KIT

It is advisable to perform a standard maintenance every 6 months or according to the frequency of use.

The standard maintenance consists in verifying the presence of grease for the spheres (7) and block with threadlock or with a grain between the ferrule (3) and the body (1)

Instructions:

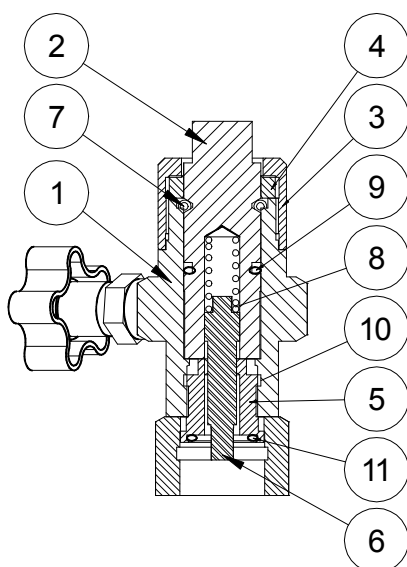

- For the version with grain, unscrew it completely and remove it
- Unscrew the ferrule (3) completely by using a strap wrench
- By being careful not to lift the pin (2), remove the ring (4)
- Check that 19 spheres (7) are present
- Apply grease on the spheres (7) with a paintbrush
- Remount the ring (4) being careful to mount it in the correct direction. Place the countersunk hole above the spheres (7)
- For the version without grain, put a drop of threadlock on the second coil, starting from the top of the thread on the body (1)
- Screw on the ferrule (3) and lock it by using a strap wrench.
- For the version without grain, follow the instructions of the threadlock liquid or wait at least 1 day to let it dry, before using the kit.
- For the version with grain, mount it in its bore. The kit can be used immediately.

CAUTION, DANGER!

When proceeding with the pre-charging operation or in any case, when the kit is used in presence of pressure, always make sure the ferrule (3) is completely screwed on and blocked

More in particular, when the pin (2) is unscrewed be careful not to unscrew the ferrule (3) as well.



SAIP s.r.l.
Via Lambro, 23/25/27 • 20073 Opera (Mi) Italy
Tel. +39 02 57603913 (r.a.) • Fax +39 02 57604752
e-mail: saip@saip.it - www.saip.it

Cap. Soc. € 99.000,00
P.IVA 10218550159 • CCIAA 1357995 Mi
Codice univoco : M5UXCR1
Reg. Trib. Milano 0313066
Vol. 7843 Fasc. 16

